

BED IN A BOX
OWNER'S MANUAL

CONTENTS

- **Safety information**
- **What's included**
- **Assembly of the base**
- **Operation**
- **Troubleshooting**

SAFETY INFORMATION

ATTENTION! IMPORTANT SAFETY INSTRUCTIONS.

SAVE THIS MANUAL! PLEASE READ THESE INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT. PROPER OPERATION OF YOUR ADJUSTABLE BED IS NECESSARY TO ENSURE THE LONG LIFE AND DURABILITY YOU EXPECT FROM A HIGH-QUALITY PRODUCT.

OPEN THE BOX IN A FLAT POSITION

DANGER! DO NOT OPEN FROM A VERTICAL POSITION. THIS CAN DAMAGE THE BASE THE MANUFACTURER HAS TESTED AND INSPECTED THIS PRODUCT PRIOR TO SHIPMENT.



ELECTRICAL SAFETY

Always unplug this adjustable bed from the electrical outlet before any cleaning or maintenance of the adjustable bed. To safely disconnect, remove the plug from the outlet. Keep cord away from heated surfaces. Use only indoors

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THE PRODUCT TO MOISTURE

BATTERY PRECAUTIONS Follow these precautions when using batteries in this device:

WARNING: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.

1. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. A reversed battery may cause damage to the device.
2. Do not mix different types of batteries together (e.g. alkaline, rechargeable and carbon-zinc) or old batteries with fresh ones.
3. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
4. Do not try to recharge a battery not intended to be recharged; it can overheat and rupture. (Follow battery manufacturer's directions.)

WARRANTY WARNING!

This bed is specifically designed to require no maintenance by you, the user. Any opening or tampering with the control box, motors or hand controls (with the exception of the battery compartment, if equipped) will void the warranty. Do not attempt to alter component wiring or adjust or modify the structure of the product in any way or the warranty will be void. Only those authorized may conduct repairs or part replacement on your adjustable bed.

SAFETY INFORMATION

IN - HOME USE ONLY

This adjustable bed is designed exclusively for in-home use.

HOSPITAL/MEDICAL DISCLAIMER

This bed is NOT designed for hospital or medical use (in-home or commercial) and is NOT designed to meet medical or hospital standards. Do not use this bed with TENT TYPE oxygen therapy equipment or use near explosive gases.

PRODUCT RATINGS Lift motor restrictions: The lift motors in this bed are NOT designed to operate continuously for more than one minute over an eight (8) minute time period, or approximately (1) a 12% duty cycle. To ensure (2) reliable functionality and full life of this product, do not attempt to exceed these limits.

NOTE: Attempting to circumvent or exceed this rating will shorten the life expectancy of the product and may void the warranty.

Weight restrictions: The recommended weight limits on our adjustable beds are: **130KG** for a single base.

The structure of the bed will support the recommended weight when distributed evenly across the bed.

The head and foot sections are not designed to individually support or lift this amount of weight.

For optimal performance and integrity of structure, entering and exiting the adjustable bed with the bed in the flat position is recommended.

SMALL CHILDREN AND PETS WARNING


Immediately dispose of all packing materials as they can pose a smothering risk to small children and pets. Injury could also occur if children or pets are permitted to play on or under the bed. Do not allow children to operate this bed without adult supervision.

LUBRICATION AND CLEANING

This product is designed to be maintenance-free. The lift motors are permanently lubricated and sealed—no additional lubrication is required. Do not apply lubricant to lift motor lead screws or any nylon nuts or the bed may inadvertently creep downward from the elevated position.



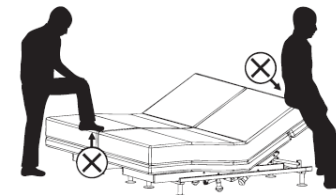


LIFT WARNING




DO NOT SIT ON THE HEAD OR FOOT SECTIONS WHILE IN THE RAISED POSITION, OR DURING LIFT OR LOWERING CYCLES.








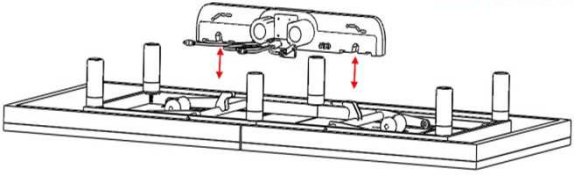


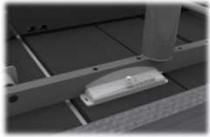MOVING AFTER INSTALLATION Do not place adjustable bed vertically on its head or foot sections. This may cause injury to persons or damage to bed

WHAT'S INCLUDED ?

| | |
|---|----------------------------|
|  | 2X Base Pieces |
|  | 1X Foot mattress retainer |
|  | 6 X 4 heights legs |
|  | 1X RF Remote |
|  | 1X Double socket -USB port |

| | |
|---|--------------------------------------|
|  | 1X Motion detector led light |
|  | 1X 6500N Motor |
|  | 1 X Power Supply |
|  | 2 X 9V Batteries 2X AAA Batteries |
|  | 1 X AC Cord |

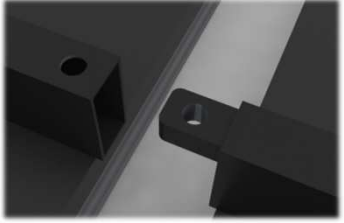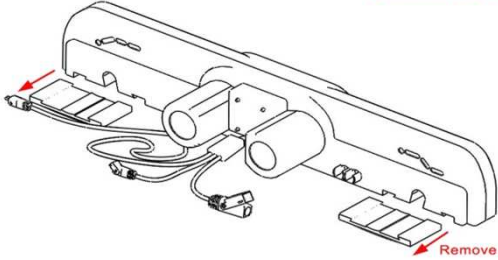
ASSEMBLY – BASE I

| | | | |
|---|---|--|--|
|  | <p>Carefully lift both base pieces from the shipping carton, keeping the unit's topside down.</p> |  | <p>Decide on the correct height for you: 15cm, 18cm, 19cm, 22cm</p> |
|  | <p>Slide the rods on the base to each other. rods as shown.</p> |  <p>Assembling an engine 1</p> | <p>Remove the plastic slats away from the motor Note the marks on the motor for back and leg</p> |
|  | <p>Secure the base pieces to each other using the 2 middle legs</p> |  <p>Assembling an engine 2</p> | <p>Place the motor in considering the back and leg area and secure the motor by placing the plastic sluts back in</p> |
|  | <p>Add the remaining 4 legs to their intended corners</p> |  | <p><u>Led</u> light can be connected on the left or on the right side, Use the double side sticker at the location shown below</p> |


ASSEMBLY – BASE II




The default side is always on the right, the side can be easily changed by sliding the port at the opposite side of the bed at the intended screws.

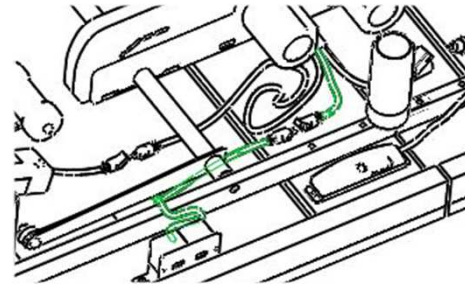


Connect the USB plug

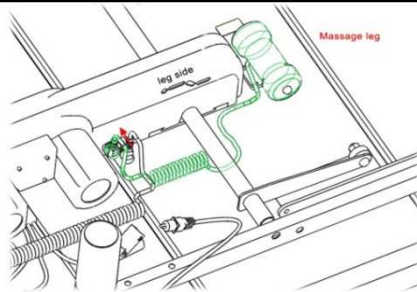


Connect the massage motor plug right and left

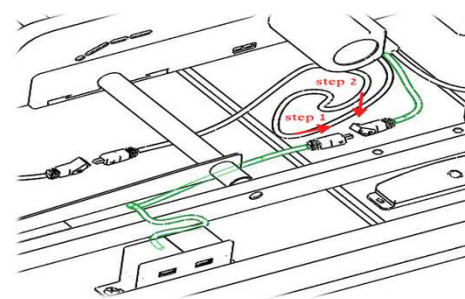


Secure the plug of the USB

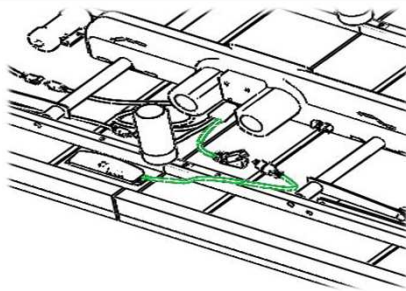


Connect the Led light plug

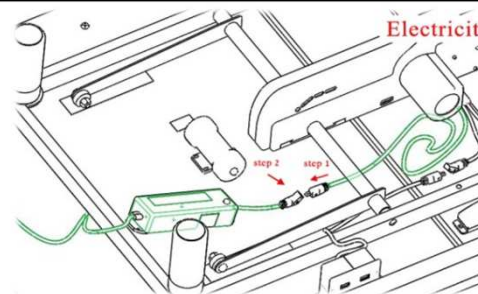

Connect the Electricity plug

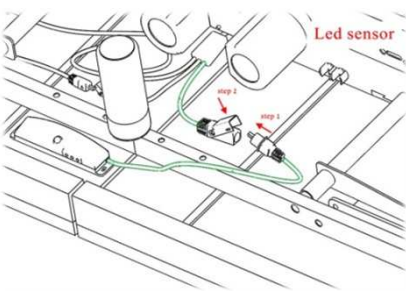

Secure the plug of the Led light

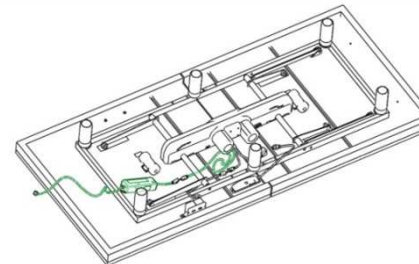


Secure the electricity Plug

ASSEMBLY – BASE III



Turn the bed on her feet
Important : do not lean the bed against the
installed legs to turn over

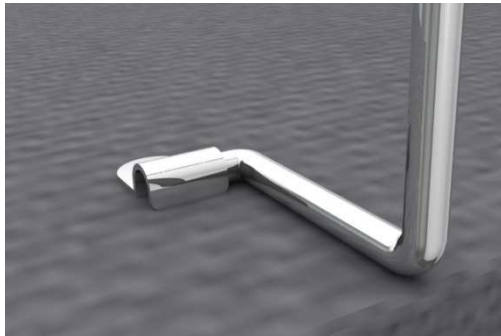

Connect the mattress retainer,
place one side than use some pressure to insert
the second side




The bed is ready , you can plug in the AC cord
to the socket

OPERATING THE BED

Bed Control System

Instruction Manual

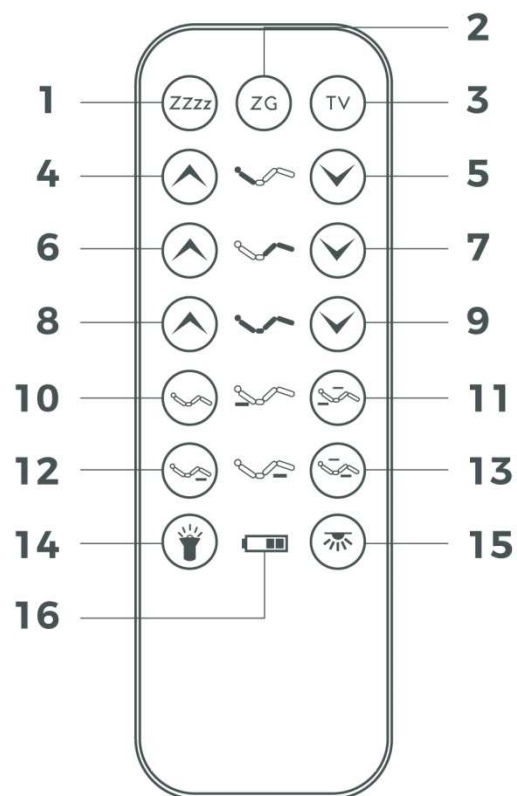

1. Sleep position
2. Zero gravity position*
3. Upright position
4. Upper body move up
5. Upper body move down
6. Lower body move up
7. Lower body move down
8. All move up

9. All move down
10. Upper body massage increase (Low/Med/High)
11. Upper body massage decrease (Low/Med/High)
12. Lower body massage increase (Low/Med/High)
13. Lower body massage decrease (Low/Med/High)
14. Torch (On/Off)
15. LED motion light (On/Off)
16. Battery status



OPERATING THE BED



Change the range
Sensitivity Sensor

Change the
working
mode

Coding
Button

Coding and operation of the LED Light

- For coding - use a small screwdriver
- For performing actions B+C
Remove the black corks and use a small screwdriver

A. Coding the LED Light to the remote- the LED comes coded, this is only in the case of replacing a remote or led -should be re-coded

1. Remove the batteries from the remote control and re-insert them
2. After re-inserting the batteries and within 10 seconds, press and hold 3-sec the coding button by a small screwdriver

B. Change the working mode of LED

1. Turn the button clockwise to the end, night working mode.
2. Turn the button anti-clockwise to the end, for a day & night working mode.

C. Change the range sensitivity Sensor

If you want to reduce the range of the sensor sensitivity - remove the black Cork and turn the button clockwise to the end by a small screwdriver
This reduces the eye's absorption distance.

* After lighting the LED, the bulb is set to light for 3 minutes.

* At any stage that the LED is on, it can be turned off with the remote control

TROUBLESHOOTING

| | |
|---|--|
| Remote control will not illuminate | Check the battery status on the remote and replace the batteries if necessary |
| Remote control seems operable but the bed is not activated | Unplug the power cord ,wait 30 seconds and plug back in. |
| Remote control seems operable but the bed is not activated (2) | Check if the electricity is on, if there is a power failure |
| There is a power failure and the bed is adjusted | Insert the 2 9V batteries to the power supply and press the red restart button, the bed will return to the 0 point |